JVC

ENGLISH
DEUTSCH
FRANÇAIS
ITALIANO
ESPAÑOL
中 文

SPEAKER UNIT

INSTALLATIONANLEITUNG : LAUTSPRECHEREINHEIT
MANUEL D'INSTALLATION : ENCEINTE
MANUALE D'INSTALLAZIONE : UNITÀ DI DIFFUSIONE
MANUAL DE INSTALACION : UNIDAD DE ALTAVOZ
安装手册 : 扬声器装置

TS-C421SPG
TS-C421SPGU

INSTALLATION MANUAL

SPEAKER UNIT FOR A JVC PLASMA DISPLAY MONITOR
LAUTSPRECHEREINHEIT FÜR JVC PLASMA BILDSCHIRM
ENCEINTE POUR UN MONITEUR DE VISUALISATION PLASMA
UNITÀ DI DIFFUSIONE PER MONITOR CON SCHERMO AL PLASMA JVC
UNIDAD DE ALTAVOZ PARA UN MONITOR PLASMA DISPLAY
用于 JVC 等离子显示监视器的扬声器装置

LCT1425-001A

SAFETY PRECAUTIONS

Regarding the "safety precaution" symbols

Various symbols are indicated on the product and in this Installation Manual.
These symbols are provided in order to prevent physical injury and material damage. Be sure you understand the meaning of the symbols before reading this manual.

Explanation of symbols

- This symbol (including a warning) indicates that CAUTION should be exercised.

General caution

- Prohibited actions are indicated by the following symbols.

Prohibited **Disassembling prohibited**

- Actions that should be performed (compulsory and instructed actions) are indicated by the following symbol.

General instruction

WARNING Failure to observe what is mentioned under this symbol could lead to physical injury and material damage. Extreme caution should be exercised.

- Do not modify (disassemble) the front speakers.
  This could result in fire or electric shock.

CAUTION Failure to observe what is mentioned under this symbol could lead to physical injury and material damage. Extreme caution should be exercised.

- Connect the power cord plug to a wall outlet only after all necessary equipment has been connected.
  Making connections while the power cord plug is connected to the wall outlet could result in electric shock.

Accessories

Check to be sure you have all of the supplied accessories. The number in the parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

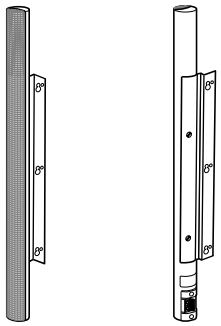

Front speakers (L,R)

Speaker cords (1.2 m x 2)

Cord clamps (2)

Mounting screws (for the GD-V42XX series display) (6)

Names of parts

Front

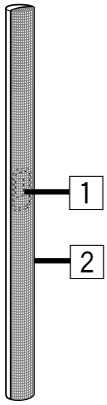

1 Speaker unit

2 Saran net
This net protects the speaker.

Back

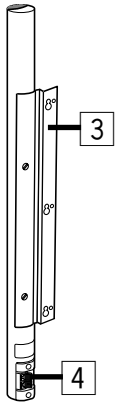

3 Speaker bracket
Attach to the back of the display.

4 Speaker terminal
Connect this terminal to the speaker terminal on the display using the supplied speaker cords.

ENGLISH

Attaching the front speakers to displays other than the GD-V42XX series

ENGLISH

Using the speaker brackets, you can attach the front speakers to the side of the display.

- For attaching the front speakers to the GD-V42XX series display, see page 4.
- In this section, the GM-P420 series displays are shown in the illustrations. The mounting screw positions of the other displays are almost the same as those of the GM-P420 series, therefore you can attach the front speakers as in the procedure below.
- Do not loosen the screws other than the mounting screws.
- Use only the screws already attached to the display.

1. Loosen the mounting screws on the back of the display.

Loosen the mounting screws with phillips screwdriver, leaving a length of about 3 mm.

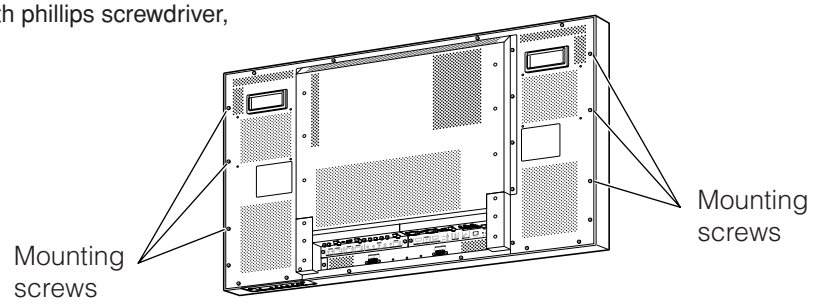

2. Attach the front speaker to the back of the display.

Hook the speaker bracket onto three mounting screws through the screw holes (A), and slide it down.

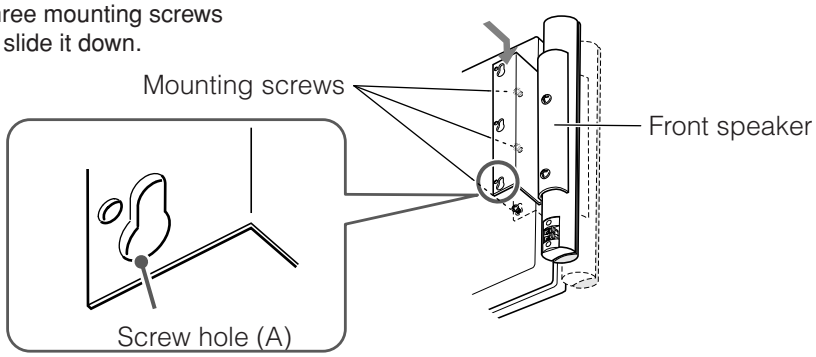

3. Tighten the mounting screws firmly with phillips screwdriver.

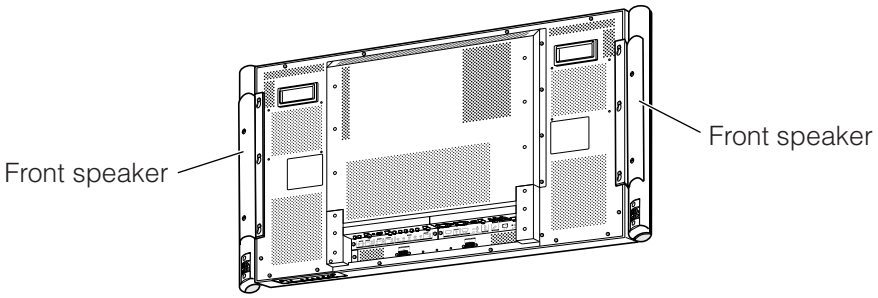

- When moving the display, do not hold the speakers.
- The speakers are not of anti-magnetic type.
  Do not place anything susceptible to magnetism, such as a video tape, nearby when setting the speakers.

Connecting the speaker cord

Attach to the speakers

When you connect the supplied speaker cord to the terminal clamp of the speakers, fold the end of each speaker cord to avoid short-circuit.

1. **Fold the end of each speaker cord.**
2. **Press and hold the terminal clamp.**
3. **Insert the speaker cord, and release the finger from the terminal clamp.**

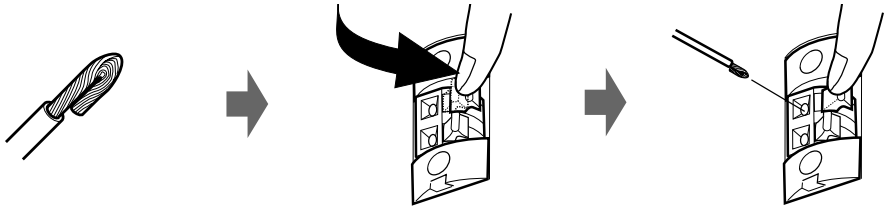

- Connect the cord with black stripes to the ⊖ (black) terminal and the other cord to the ⊕ (red) terminal.
- Be careful that connection of the speaker cords to incorrect polarity terminals (⊕ and ⊖) degrades stereo feeling and sound qualities.

Attach to the display

1. **Open the terminal clamp.**
2. **Insert the speaker cord.**
3. **Close the terminal clamp.**

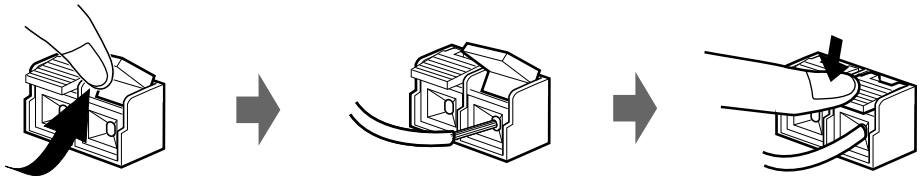

- Connect the cord with black stripes to the ⊖ (black) terminal and the other cord to the ⊕ (red) terminal.
- Be careful that connection of the speaker cords to incorrect polarity terminals (⊕ and ⊖) degrades stereo feeling and sound qualities.

Bundling the speaker cords

You can bundle the speaker cords neatly with the supplied cord clamp, as illustrated.

- Stick the cord clamp after removing its protective seal. Give an amount of time before bundling the speaker cords, or the cord clamp may be detached.
- If you are sticking the cord clamp to the back of the display, be careful not to block the ventilation hole.

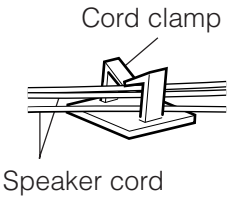

Attaching the front speakers to the GD-V42XX series display

ENGLISH

Using the speaker brackets, you can attach the front speakers to the side of the display.

- Do not loosen the screws other than the protective screws.
- Use only the supplied mounting screws for attaching the front speaker.

1. Remove the protective screws on the back of the display with phillips screwdriver.

Before removing them, make sure which screws to be removed by placing the front speaker.

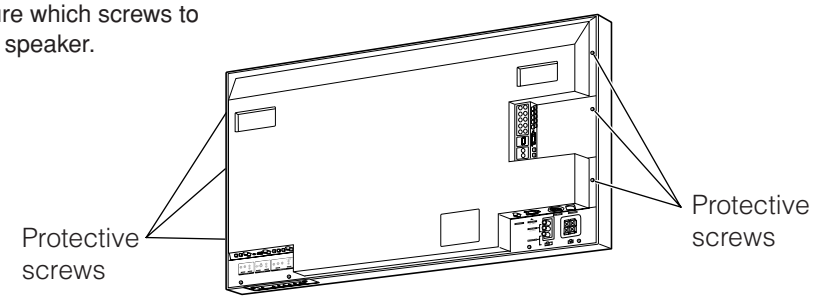

2. Place the front speaker on the back of the display so that the screw holes (B) of the speaker bracket are put on those of the display.

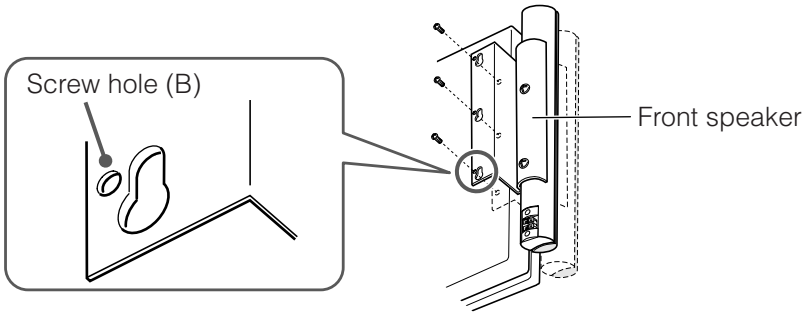

3. Tighten the three supplied mounting screws firmly with phillips screwdriver.

Use the rest of three supplied mounting screws on the other side.

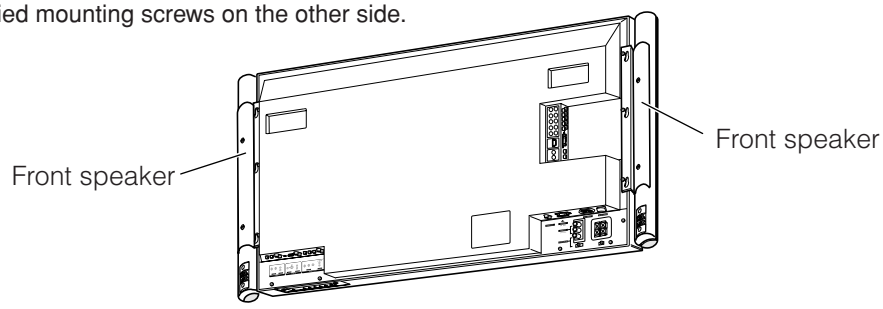

- When moving the display, do not hold the speakers.
- The speakers are not of anti-magnetic type.
  Do not place anything susceptible to magnetism, such as a video tape, nearby when setting the speakers.

Connecting the speaker cord

Attach to the speakers

When you connect the supplied speaker cord to the terminal clamp of the speakers, fold the end of each speaker cord to avoid short-circuit.

1. **Fold the end of each speaker cord.**
2. **Press and hold the terminal clamp.**
3. **Insert the speaker cord, and release the finger from the terminal clamp.**

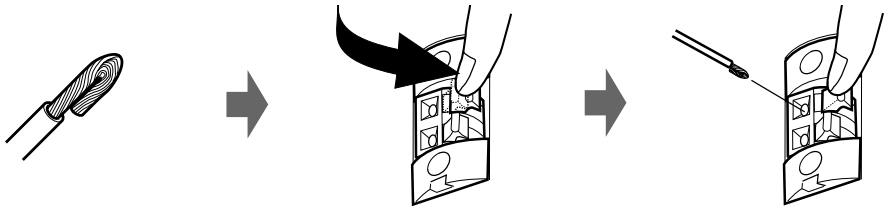

- Connect the cord with black stripes to the ⊖ (black) terminal and the other cord to the ⊕ (red) terminal.
- Be careful that connection of the speaker cords to incorrect polarity terminals (⊕ and ⊖) degrades stereo feeling and sound qualities.

Attach to the display

1. **Press and hold the terminal clamp.**
2. **Insert the speaker cord, and release the finger from the terminal clamp.**

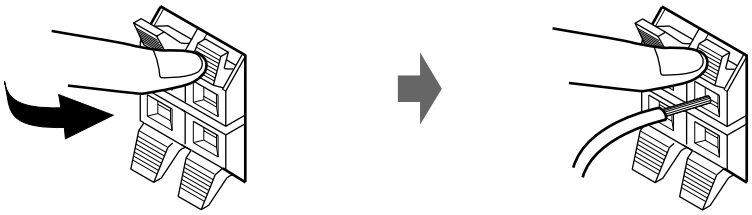

- Connect the cord with black stripes to the ⊖ (black) terminal and the other cord to the ⊕ (red) terminal.
- Be careful that connection of the speaker cords to incorrect polarity terminals (⊕ and ⊖) degrades stereo feeling and sound qualities.

Bundling the speaker cords

You can bundle the speaker cords neatly with the supplied cord clamp, as illustrated.

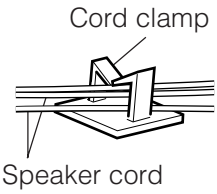

- Stick the cord clamp after removing its protective seal. Give an amount of time before bundling the speaker cords, or the cord clamp may be detached.
- If you are sticking the cord clamp to the back of the display, be careful not to block the ventilation hole.

Specifications

- Power Handling Capacity : 3 W
- Impedance : 6 Ω
- Speaker : 9.5 cm x 1 cm
  Direct Drive Speaker, two
- Dimensions
  (W x H x D) : 43 mm x 640 mm x 43 mm
  (Mass) : 0.7 kg (for each excluding the speaker bracket)

TS-C421SPG / TS-C421SPGU SPEAKER UNIT

JVC

VICTOR COMPANY OF JAPAN, LIMITED

© 2003 VICTOR COMPANY OF JAPAN, LIMITED

0303-T-MW-MB